

PNK-1B Polystyrene Nuc Kit

Included in your kit you should
receive the following items:

- a. 2- Polystyrene Box Sides
- b. 2- Polystyrene Box Ends
- c. 2- Yellow Plastic Top Rails
- d. 2- Entrance Reducers
- e. 1- Polystyrene Top Cover
- f. 1- Polystyrene Bottom Board
- g. 1- Mesh Varroa Plate

**** Divider board not included ****



PNK-1B Polystyrene Nuc Kit




Assemble your box first.
Take the two short box ends, and snap the top rails into place as shown in the photo at left.
Once you have the rails in place, you can begin assembling your hive box. Take your 2 longer box sides, lay one face down, place glue* on the pegs of the short sides, slide the short end pegs into the long side holes. Place glue* on the remaining 2 pegs and place them into the holes of the remaining board. Your box is now assembled.



**Suggested Glue:
Tite-Bond I or III or Wood Glue*

Slide your Varroa Screen, into the bottom board.

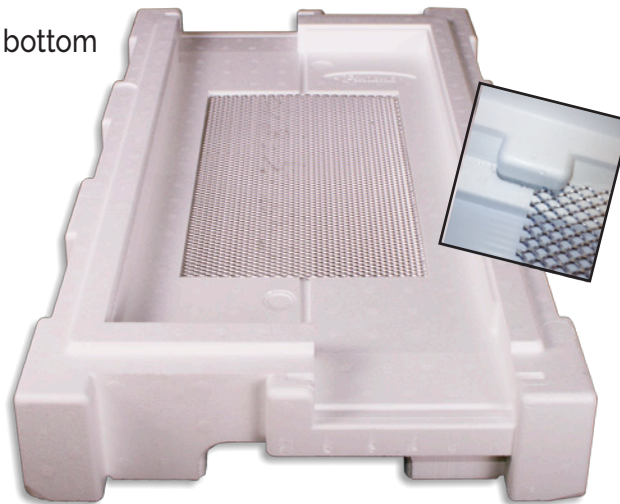

**** Paint all surfaces that will be exposed to UV light.
Suggested paint: floor or cement paint**